



FREQUENCY

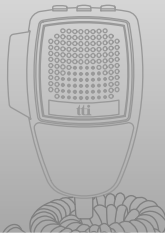

TCB-770

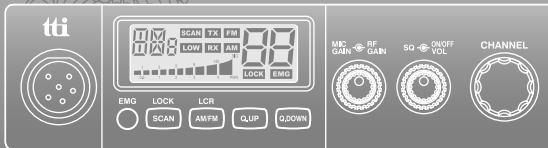

4W MOBILE CB TRANSCEIVER INSTRUCTION MANUAL



www.ttikorea.co.kr

CONTENTS

ENGLISH

1. Introduction	3
2. Supplied Accessories	3
3. Installation	3
4. Transceiver Controls and Functions	6
1) Microphone Jack	6
2) LCD Display	6
3) Emergency Button	6
4) Scan/Lock Button	7
5) AM/FM and LCR Button	7
6) Quick Up Button	8
7) Quick Down Button	8
8) Microphone Gain Knob	8
9) RF Gain Knob	8
10) Squelch Control knob	8
11) Volume and Power On/Off Knob	8
12) Channel Selector	8
13) Antenna Connector	9
14) S-Meter	9
15) Power 13.2V DC	9
16) EXT Jack	9
5. LCD Display	9
6. Microphone	10
7. Menu Setting Mode	10
8. How to Operate the Transceiver	11
9. Band Selection	12
10. Trouble Shooting	13
11. CE Declaration	13
12. Safety Requirement	13
13. E Mark Declaration	13
14. Specification	14
15. Restrictions on the use	15
16. Freequency Table	16

1. Introduction

TCB-770 transceiver is designed to have a good performance in any conditions that the transceiver operates, using rugged build chassis, PCB's and components. This transceiver is also designed for users' convenience, implementing human ergonomics to locate the knobs and buttons in the proper places. The combination of well designed knobs and buttons as well as user friendly graphic layouts will lead users to quickly adapt themselves for the easy operation. The newly applied menu mode will make professional users more satisfactory with pleasure. The elegant and luxury blue LED light supporting the face design will go well with any vehicles.

This instruction manual has been designed to enable you to get the best use from your CB Transceiver, therefore you are recommended to take a few minutes to read this instruction manual before initial use of your CB Transceiver.

2. Supplied Accessories

Your transceiver is supplied with a full range of accessories to help you get started and virtually benefit from all the features straight away.


TCB-770 transceiver	1 unit
Microphone with cord	1 unit
Power cable	1 unit
Radio mounting bracket	1 unit
Radio mounting thumb screw with rubber washer	2 pieces
Mounting screw with washer (for transceiver bracket)	3 pieces
Mounting screw with washer (for microphone bracket)	2 pieces
Microphone mounting bracket	1 piece

3. Installation


Plan the location of the transceiver and microphone first, which is most convenient for the operation. The transceiver should normally be mounted horizontally, but may be mounted vertically. The bracket supplied can be fitted above or below the case allowing the TCB-770 to be cradled by the bracket or suspended from it.

Consider that this location of the transceiver should not interfere with the driver and passengers. Choose a spot where the microphone and all controls are easily accessible.


- 1) Put the mounting bracket on the proper location where you are going to install.
- 2) Drill holes and fix mounting bracket on the location.
- 3) Connect the antenna cable plug to the standard receptacle on the transceiver, which is marked "ANT".

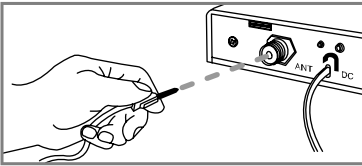


- 4) Connect the power cable directly to the vehicle battery or fuse box of the car. Be careful to make sure of the polarity of the battery first and connect the cable. (Red: Positive Pole(+), Black: Negative Pole(-). The same colours are shown on the battery and in the fuse box of the car.)
- 5) Connect the power cable to the transceiver cable.

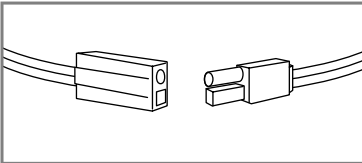

- 6) Mount the microphone bracket on one side of the transceiver, or near it using two screws included.
- 7) Connect the microphone to the transceiver's microphone receptacle. Now you are ready to operate the transceiver.

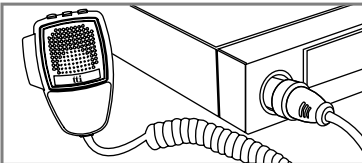

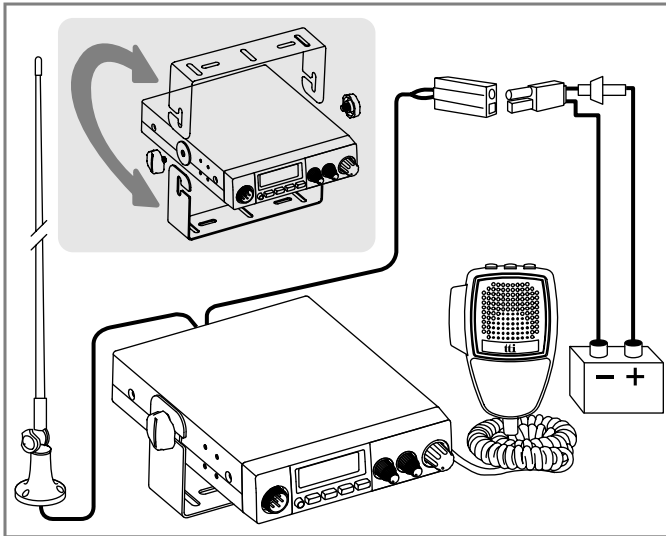

Installing An Antenna


It is very important to select a good quality high efficiency 27MHz antenna. A poor quality antenna or one not designed for the 27MHz band will give very poor performance and could cause damage to the transceiver.

- 1) Place the antenna as high as possible.
- 2) The longer the antenna is, normally the better is the performance of the transceiver.
- 3) Try to mount the antenna in the centre of the surface that you select.
- 4) Make sure that you have a solid metal-to-metal ground connection.
- 5) Be careful not to damage the cable during the installation.

Warning : Never try the operation of your transceiver before connecting a proper antenna in order not to cause any damage.

4. Transceiver Controls and Functions

ENGLISH

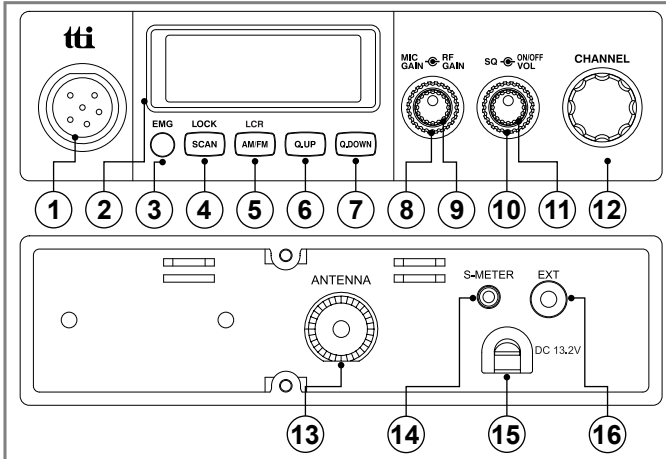


1) Microphone Jack



Insert the microphone into this jack. Use the guide for easy connection.

2) LCD Display

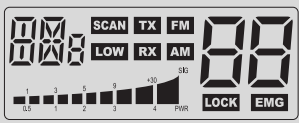

Most of the operational information is displayed. Please see item no. 5 for the details of information.

3) Emergency Button



Pressing this button will lead you to the emergency channel, "CH 9" and the EMG icon will be displayed. The channel selector and quick up/quick down buttons will not work. To return to the previous operation mode, momentarily press the emergency button again.

4) Scan/Lock Button



Scan : Press this button momentarily to start scanning upward to catch any channels that are occupied by others.

To activate/deactivate the channel scan, press the Scan button briefly. The Scan icon will appear when the channel scan is active. Scanning will only stop when you deactivate the scan function.

Turn the channel selector counter-clockwise during scanning in order to change the scanning direction.

The transceiver will scan through the whole transceiver channels. If your transceiver detects a valid signal the scan will pause for the period that has been set by the menu mode setting (continuously receiving or 1-99 seconds for scan receive time and immediate response or 1-99 seconds for scan delay time). If you press the PTT button when your transceiver detects a signal, the radio will transmit on the same channel. Scanning will resume after the scan receive time and/or the scan delay time. Use the channel selector or quick up/quick down selector to resume scanning immediately.

If you press the PTT button during scanning, the radio will return to your original channel. Scanning will resume after the scan receive time and/or the scan delay time. Use the channel selector or quick up/quick down selector to resume scanning immediately.

Lock : Press this button for more than 2 seconds to activate and deactivate the keypad lock function. This function locks only the channel selector, quick up/quick down buttons, scan button. Other buttons and selectors work normal.

5) AM/FM and LCR Button



When the transceiver is used in UK, UE, or EC frequency band modes this button activates or deactivates Last Channel Recall function. In all other modes (where national regulations permit this), this button allows user to switch between AM and FM modes by momentarily pressing this button.

6) Quick Up Button



Press this button briefly to increase the channels by 10 steps.

7) Quick Down Button



Press this button briefly to reduce the channels by 10 steps.

8) Microphone Gain Knob



Turn this knob clockwise and counter-clock until you get better microphone gain while you move the microphone to the optimum distance from your mouth.

9) RF Gain Knob



Turn this knob clockwise until you get better RF gain. You may need to decrease the sensitivity by turning the knob counter-clockwise when there is a very strong signal.

10) Squelch Control knob



Turn this knob counter-clockwise until you hear the background noise and then turn the knob a little clockwise until the noise disappears. In this way, you get the best receive sensitivity.

11) Volume and Power On/Off Knob



 
To switch on the transceiver turn this knob clockwise. After clicking sound the transceiver is switched on. The more you turn this knob clockwise, the bigger the audio sound grows.

12) Channel Selector



Turn right or left, and this allows you to select the channel one by one that you like to use.

13) Antenna Connector



Insert the male connector of the antenna cable into this female antenna connector.

14) S-Meter



Connect an external S-Meter (This is not supplied.) to this port.

15) Power 13.2V DC




Connect the power supply cable to this port.

16) EXT Jack




Connecting a loud speaker to this port makes the built-in speaker turned off.

5. LCD Display

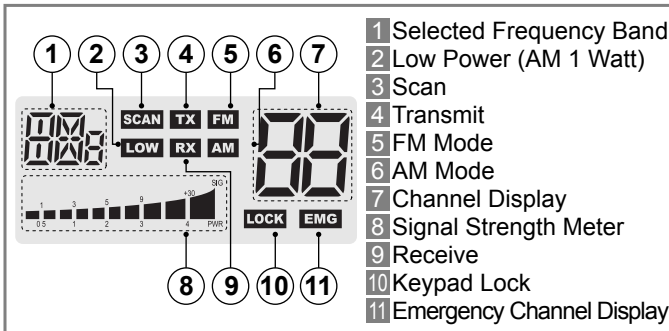

6. Microphone

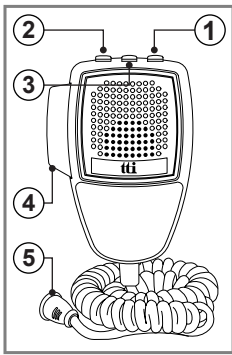

- 1 Up Button : Use this button to change the channels upward.
- 2 Down Button : Use this button to change the channels downward.
- 3 Lock Button : This locks the up button and down button of the microphone. Also, this lock works same as the lock button on the transceiver front panel.
- 4 PTT Button : While pressing this button, you can transmit.
- 5 6 Pin Microphone Connector : Connect this to the microphone jack on the front panel of the transceiver.

7. Menu Setting Mode

Pressing the Lock button of the microphone, turn on the transceiver. The transceiver goes to the Menu Setting Mode, which has the following menu features. This menu setting mode allows you to program user preferences, activate features and use advanced functions.

Display	Functions	Settings
bP	Beep Tone	On(O _N) / Off(O _F)
tO	Time-out Timer	Off(O _F) and 1~99 Sec.
Sr	Scan Receive Timer	Continue(C _O) and 1-99 Sec.
Sd	Scan Delay Timer (after Receiving signal)	Off(O _F) and 1~99 Sec.
bL	Backlight Dimmer	High(H _I) / Low(L _O) / Off(O _F)

Note :

1. Use Channel Selector to select the main menu features such as Beep Tone, Time-out Timer, Scan Receive Timer, Scan Delay Timer, Backlight Dimmer and Backlight Timer.
2. Use AM/FM button to enter value setting level.
3. Use Channel Selector to select or change any value that you like to have while the values are blinking.
4. Use SCAN button to return to the previous main menu features.
5. Press Lock button or PTT button of the Microphone to complete the selections and changes and return to the stand-by mode. Or the selections and changes will be automatically confirmed after 5 seconds of the selections and changes. Using Scan button to return to the previous main menu features will be accompanied by the automatic confirmation of the selected values and changes.

8. How to Operate the Transceiver

- 1) Make sure the microphone is connected to the microphone jack.
- 2) Make sure the power cable is connected properly.
- 3) Make sure the antenna is connected to the antenna receptacle.
- 4) It is better to put the squelch control knob turned fully counter-clockwise.
- 5) Turn on the transceiver and control the volume level.
- 6) Adjust the squelch control knob to the optimum level.
- 7) Select your desired channel.
- 8) To transmit, press the PTT button and speak to the microphone.
- 9) Release the PTT button to receive.

9. Band Selection



Pressing AM/FM button and Scan button at the same time, turn on the transceiver. Using the channel selector, select the band that you are

going to select. The LCD display offers you the band information. The band chart for each area is as follows. Press AM/FM button while the band information is blinking or wait for 5 seconds to complete the selection and go to the transmit and receive mode. This transceiver has "EC" band setting when it is shipped out from the factory.

Settings	Display	Band
EC	EC	Europe 40 Ch FM 4W
E	E	Spain 40 Ch AM/FM 4W
F	F	France 40 Ch FM 4W, 40 Ch AM 1W
PL	PL	Poland 40 Ch AM / FM 4W (Polish Frequencies : 5KHz)
UK	UK	UK 40 Ch FM 4W (British Frequencies)
UE (EU/UK)	UE	UK 40 Ch FM 4W (British Frequencies) + CEPT 40 Ch FM 4W (EC)
I	I	Italy 40 Ch AM / FM 4W
I2	I2	Italy 34 Ch AM / FM 4W
D	d	Germany 80 Ch FM 4W, 12 Ch AM 1W
D2	d2	Germany 40 Ch FM 4W, 12 Ch AM 1W
EU	EU	Europe 40 Ch FM 4W, 40 Ch AM 1W

10. Trouble Shooting

If you experience problems with your TCB-770 transceiver, first check the power supply source. Poor connection of the power supply source can cause problems such as no transmission, no reception or poor reception, and weak or no sound. Ensure that the microphone and antenna are also well connected.

If this does not solve the problem, reset your transceiver as follows.



- 1) Switch off the transceiver.
- 2) Pressing EMG button, switch on the transceiver.

This will reset the transceiver, so all the memories are erased and the parameters return to the initial factory setting. This should fix most problems. In case of further difficulty, please consult your dealer or visit our website.

11. CE Declaration

12. Safety Requirement

13. E Mark Declaration

14. Specification

GENERAL	Channel	40 (See the frequency band chart)
	Frequency Range	26.965 MHz ~ 27.405 MHz
	Operating mode	F3E (FM), A3E (AM)
	Frequency Control	PLL Synthesizer
	Frequency Tolerance	±0.002%
	Operating Temperature Range	-10 to + 55 °C
	Microphone	Plug-in Type
	Input Voltage	13.8V DC ± 15%
	Size	140 (W) x 186 (L) x 37 (H)
	Weight	990 g
	Antenna Connector	Antenna Connector
TRANSMITTER	Power Output	Duty cycle 10% 4 Watts @13.8V DC
	Modulation	AM:from 85% to 95% FM:1.8KHz ± 0.2KHz
	Frequency Response	300Hz to 3000Hz
	Output Impedance	50ohms, Unbalanced
	Harmonic Suppression	More than -36dBm
	Current Drain	AM Full Mod. 1.6A Max.
RECEIVER	Receiving System	Dual conversion superheterodyne
	IF Frequencies	Double Conversion 1st 10.695MHz/2nd 455KHz
	Sensitivity	0.7µV for 10dB(S+N)/N in AM Mode 0.5µV for 20dB SINAD in FM Mode
	Audio Output Power	2.0W @ 8 Ohm
	Audio Distortion	Less then 8% @ 1KHz
	Image Rejection	60 dB
	Adjacent Channel Rejection	60 dB
	Conducted Spurious	More than 60 dB
	Frequency Response	300 to 2500Hz
	Built-in Speaker	8 Ohms, round
	Squelch	Adjustable; Threshold less than 1 microvolt

* Specification is subject to change without prior notice.

15. Restrictions on the use

COUNTRY	Settings	Use restrictions and other comments
BELGIUM	EU F EC	40 Ch - 4W FM - Individual licence is required
SWITZERLAND	EU F EC	40 Ch - 1W AM - Individual licence is required
DENMARK,NORWAY LUXEMBOURG	EC	40 Ch - 4W FM - Free use
FINLAND,PORTUGAL FRANCE,NETHERLANDS	EU F EC	40 Ch - 4W FM - Free use 40 Ch - 1W AM - Free use
GERMANY	D	80 Ch - 4W FM - Individual licence is required
	EU	12 Ch - 1W AM - Individual licence is required
	EU EC	40 Ch - 1W AM - Use ch 4-15 only
	D2 EC	40 Ch - 4W FM - Free use 12 Ch - 1W AM - Individual licence is required
fx Allowed: from 26.960 to 27.410 MHz "BAPT 222 ZV 104"		
GREECE	E EU F I EC	40 Ch - 4W FM - Free use
		40 Ch - 5W AM - Free use
T/R 20-02		
IRELAND	E EU F I EC	40 Ch - 4W FM - Free use
		40 Ch - 1W AM - Free use
S.I. No 436 of 1998. WIRELESS TELEGRAPHY ACT, 1926 (SECTIONS) (EXEMPTION OF CITIZENS' BAND (CB) RADIOS) ORDER, 1998		
ITALY	E EU F I EC	40 Ch - 4W FM - General authorisation is required
		40 Ch - 1W AM - General authorisation is required
	I2	34 Ch - 4W FM
PNF issued on DM 08.07.02 NOTES 49 A-B-C-D-E-G		
SPAIN	E EU F EC	40 Ch - 4W FM - Individual licence is required
		40 Ch - 4W AM - Individual licence is required
Art. 57 - Law 11/1998 dated 24th April		
SWEDEN	EU F EC	40 Ch - 4W FM - Free use
		40 Ch - 1W AM - Individual licence is required
UK	UK EC	40 Ch - 4W FM - Individual licence is required
		UK-RA-MPT 1382/MPT1320; UK-R&TTE - S.I.L. 2000:730
POLAND	PL EU EC	40 Ch - 4W FM / AM - Free use

16. Frequency Table

	EU/E/F/ UK(CEPT)	EC	I	I2	D		D2	PL	UK (ENG.)		
1	26.965	26.965	26.965	26.965	1	26.965	41	26.965	26.965	26.960	27.60125
2	26.975	26.975	26.975	26.975	2	26.975	42	26.975	26.975	26.970	27.61125
3	26.985	26.985	26.985	26.985	3	26.985	43	26.985	26.985	26.980	27.62125
4	27.005	27.005	27.005	27.005	4	27.005	44	27.005	27.005	27.000	27.63125
5	27.015	27.015	27.015	27.015	5	27.015	45	27.015	27.015	27.010	27.64125
6	27.025	27.025	27.025	27.025	6	27.025	46	27.025	27.025	27.020	27.65125
7	27.035	27.035	27.035	27.035	7	27.035	47	27.035	27.035	27.030	27.66125
8	27.055	27.055	27.055	27.055	8	27.055	48	27.055	27.055	27.050	27.67125
9	27.065	27.065	27.065	27.065	9	27.065	49	27.065	27.065	27.060	27.68125
10	27.075	27.075	27.075	27.075	10	27.075	50	27.075	27.075	27.070	27.69125
11	27.085	27.085	27.085	27.085	11	27.085	51	27.085	27.085	27.080	27.70125
12	27.105	27.105	27.105	27.105	12	27.105	52	27.105	27.105	27.100	27.71125
13	27.115	27.115	27.115	27.115	13	27.115	53	27.115	27.115	27.110	27.72125
14	27.125	27.125	27.125	27.125	14	27.125	54	27.125	27.125	27.120	27.73125
15	27.135	27.135	27.135	27.135	15	27.135	55	27.135	27.135	27.130	27.74125
16	27.155	27.155	27.155	27.155	16	27.155	56	27.155	27.155	27.150	27.75125
17	27.165	27.165	27.165	27.165	17	27.165	57	27.165	27.165	27.160	27.76125
18	27.175	27.175	27.175	27.175	18	27.175	58	27.175	27.175	27.170	27.77125
19	27.185	27.185	27.185	27.185	19	27.185	59	27.185	27.185	27.180	27.78125
20	27.205	27.205	27.205	27.205	20	27.205	60	27.205	27.205	27.200	27.79125
21	27.215	27.215	27.215	27.215	21	27.215	61	27.215	27.215	27.210	27.80125
22	27.225	27.225	27.225	27.225	22	27.225	62	27.225	27.225	27.220	27.81125
23	27.255	27.255	27.255	27.255	23	27.255	63	27.255	27.255	27.250	27.82125
24	27.235	27.235	27.235	27.245	24	27.235	64	27.235	27.235	27.230	27.83125
25	27.245	27.245	27.245	27.265	25	27.245	65	27.245	27.245	27.240	27.84125
26	27.265	27.265	27.265	26.875	26	27.265	66	27.265	27.265	27.260	27.85125
27	27.275	27.275	27.275	26.885	27	27.275	67	27.275	27.275	27.270	27.86125
28	27.285	27.285	27.285	26.895	28	27.285	68	27.285	27.285	27.280	27.87125
29	27.295	27.295	27.295	26.905	29	27.295	69	27.295	27.295	27.295	27.88125
30	27.305	27.305	27.305	26.915	30	27.305	70	27.305	27.305	27.300	27.89125
31	27.315	27.315	27.315	26.925	31	27.315	71	27.315	27.315	27.310	27.90125
32	27.325	27.325	27.325	26.935	32	27.325	72	27.325	27.325	27.320	27.91125
33	27.335	27.335	27.335	26.945	33	27.335	73	27.335	27.335	27.335	27.92125
34	27.345	27.345	27.345	26.955	34	27.345	74	27.345	27.345	27.340	27.93125
35	27.355	27.355	27.355	35	27.355	75	27.355	27.355	27.350	27.94125
36	27.365	27.365	27.365	36	27.365	76	27.365	27.365	27.360	27.95125
37	27.375	27.375	27.375	37	27.375	77	27.375	27.375	27.370	27.96125
38	27.385	27.385	27.385	38	27.385	78	27.385	27.385	27.380	27.97125
39	27.395	27.395	27.395	39	27.395	79	27.395	27.395	27.390	27.98125
40	27.405	27.405	27.405	40	27.405	80	27.405	27.405	27.400	27.99125

AM/FM FM